



ASUS X44H-BBR4 Battery Replacement

Remove and replace the battery in your ASUS X44H-BBR4 laptop.

Written By: Kelly Merlo



INTRODUCTION

Use this guide to replace your battery, in case your laptop is not turning on and/or it will not charge.

Step 1 — Battery



- Flip the device over.

Step 2




- Slide the right lock button to the unlock position.
- After it is unlocked, a red line will be visible.

Step 3



- Slide the left lock button into the unlock position and hold.

Step 4

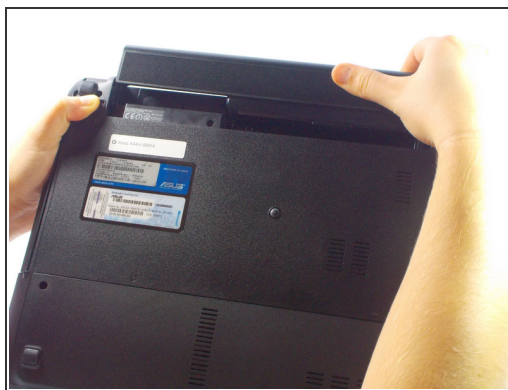

- While holding the left lock button in the unlock position, push the battery from the center away from you.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 09:55:25 PM.